

# USER MANUAL

## NuPOWER™ 05E05A

### S-BAND POWER AMPLIFIER

PART NUMBER:  
NW-PA-05E05A



Trusted RF Solutions.™



NuWaves Engineering  
132 Edison Drive  
Middletown, Ohio 45044  
PH: 513-360-0800  
FAX: 513-539-8782

[www.nuwaves.com](http://www.nuwaves.com)

[product.sales@nuwaves.com](mailto:product.sales@nuwaves.com)

---

---

## 1 NUPOWER™ PRODUCT LINE OVERVIEW

---

The NuPower family of solid state RF power amplifier (PA) modules is designed to meet the demanding needs of the Aerospace & Defense, Industrial, and Commercial markets. Based on the latest gallium nitride (GaN) technology, NuPower's power efficiency and miniature form factor make it ideal for size, weight, and power-constrained broadband RF telemetry and tactical communications systems.

### 1.1 NUPOWER™ PRODUCT LINE HIGHLIGHTS

---

- High Performance: Unique combination of broadband coverage, miniature form factors, and high efficiency.
- Enclosures: The NuPower family of power amplifiers is housed in a silver nickel plated aluminum enclosure with mounting holes incorporated into the chassis.
- Completely Characterized: The NuPower family of solid state power amplifiers has been completely characterized over temperature, voltage, and frequency. These high-performance modules offer significant value for the OEM user or the Systems Integrator.
- User Friendly: Over-Voltage protection and regulator thermal shutdown provide defenses against user interface issues.
- High Reliability: NuWaves' selection of conservatively rated components provides high reliability. Each NuPower is inspected to IPC-A-610 Class II quality standards.
- Applications: Broadband RF Telemetry • RF Communication Systems • Electronic Warfare • Unmanned Aircraft Systems (UAS) • Unmanned Ground Vehicles (UGV) • Unmanned Surface Vehicles (USV) • Software Defined Radios • Test Labs
- Available Options:
  - Fan-cooled heat sink with 28V operated fan
  - Labeled interface cable with banana jack plugs

## 2 NUPOWER™ 05E05A PA OVERVIEW

The NuPower™ 05E05A PA is a highly efficient, solid state power amplifier that provides 30 watts (typical) of RF power across 2000 MHz – 2600 MHz.

Based on the latest gallium nitride (GaN) technology, NuPower L-Band power efficiency and  $< 10 \text{ in}^3$  cubic inch form factor make it ideal for size, weight, and power-constrained broadband RF telemetry and tactical communication systems.

The NuPower™ 05E05A ruggedized chassis allows the system integrator to easily incorporate the unit into a platform operating in harsh environments with limited space, such as small Unmanned Aircraft Systems (UAS).

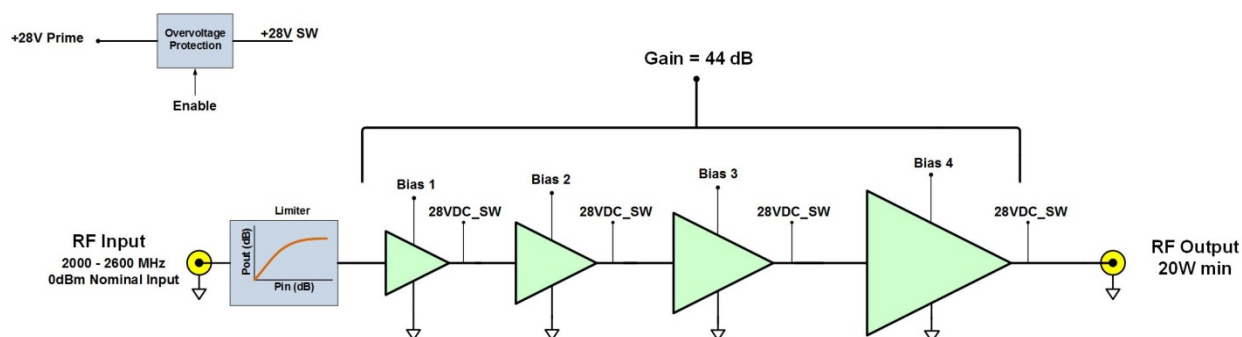


Figure 1: NuPower 05E05A Functional Diagram

## 2.1 NUPOWER 05E05A PA SPECIFICATIONS

The subsequent tables in this section outline the NuPower 05E05A's performance specifications.

**Table 1: NuPower 05E05A Electrical Specifications**

Parameter	Specification
Frequency Range	2000 MHz to 2600 MHz
RF Output Power	30 Watts (typ) 20 Watts (min)
Output Power @ 1 dB Compression	33 dBm @ 2000 MHz
	31 dBm @ 2300 MHz
	30 dBm @ 2600 MHz
RF Gain	44 dB (typ)
Input VSWR	1.9 (typ), 2.3 (max)
Output Mismatch (No Damage)	10:1
Nominal Input Drive Level	0 dBm
Maximum Input Drive Level (No damage)	+15 dBm
Harmonic	2 <sup>nd</sup> : ≤-17 dBc
	3 <sup>rd</sup> : ≤-18 dBc
Third Order Intercept Point (Two tone test at 1 MHz spacing, Pout = 20 dBm / tone)	44 dBm @ 2000 MHz
	42 dBm @ 2300 MHz
	44 dBm @ 2600 MHz
Switching Speed	2 μs
Operating Voltage	+27 to +30 VDC
Operating Current	2.7 A @ +28 VDC (typ)
Module Efficiency	41% (typ)
Power Amplifier Enable	GND On
Impedance	50 Ω

**Table 2: NuPower 05E05A Environmental Specifications**

Operating Conditions	Specification
Operating Temperature	-40 to +60 °C (ambient) -40 to +85 °C (baseplate)
Storage Temperature	-55 to +85 °C

**Table 3: NuPower 05E05A Mean Time Between Failure (MTBF)**

Conditions	Hours
Ground Benign (GB)	292,657
Airborne Inhabited Cargo (AIC)	14,955
Airborne Inhabited Fighter (AIF)	11,976
Airborne Uninhabited Cargo (AUC)	4,994
Airborne Uninhabited Fighter (AUF)	4,108

## 2.2 NUPOWER 05E05A PA MECHANICAL SPECIFICATIONS

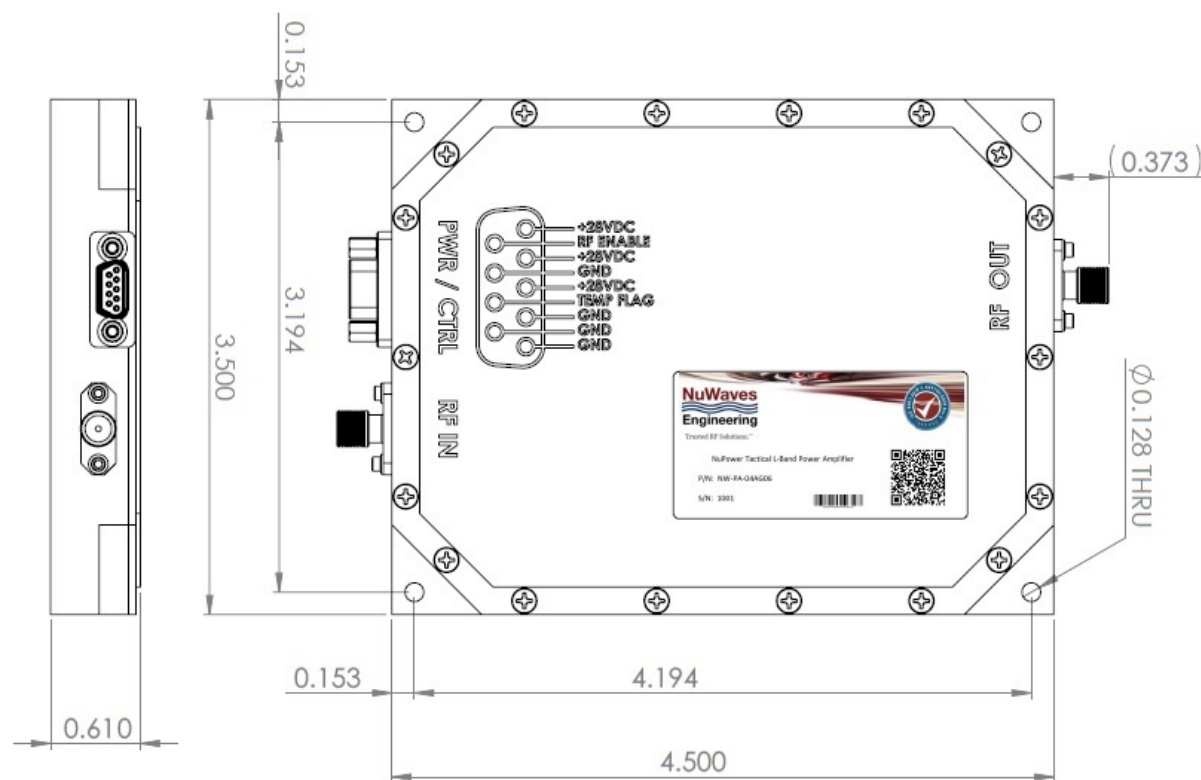


Figure 2: NuPower 05E05A Mechanical Outline

Table 4: NuPower 05E05A Mechanical Specifications

Parameter	Specification
RF Connectors	SMA (female)
Control / Power Interface Connector	9 Pin Micro-D (socket)
Dimensions (L x W x H)	4.5" x 3.5" x 0.61"
Weight	9 oz.

## 2.3 HEAT SINKING

One optional accessory for the NuPower 05E05A is a kit (p/n NW-PA-ACC-KT03), which includes a 28 VDC fan-cooled heatsink and requisite power cable. [The kit also includes an upgraded module interface cable assembly, labeled and terminated with banana plugs.]



**Figure 3: The NuPower PA Kit offers “out-of-the-box” operation for the user. The 28 VDC fan-cooled heatsink is shown with the NuPower 05E05A mounted.**



Caution: The use of external heat-sinking is required especially for those applications requiring high duty cycle operation (e.g. continuous wave) or for extended on-time testing. Operation without a proper heat sink under these conditions will cause permanent damage to the product and will void the product warranty.

The max operating temperature is 85° C (baseplate).

---

## 3 SETUP AND OPERATION

---

This section provides specific details for proper operation of the NuPower 05E05A module. Following these guidelines will prevent damage to the power amplifier or external equipment.

### 3.1 POWER SUPPLY REQUIREMENTS

---

To operate the NuPower 05E05A, ensure that the power supply has adequate overhead to source the current demand of the RF power amplifier. The power supply source must provide a typical voltage of +28 VDC with greater than 3 amps capability.

### 3.2 CONNECTING A PROPER LOAD TO THE ANTENNA TERMINAL

---

To prevent damage to the PA, the antenna terminal must be terminated into a 50  $\Omega$  load. Examples of a proper load include:

- Directly connecting to an antenna specified for the frequency range (800 MHz to 2000 MHz). Connecting to an inappropriate antenna may result in damage to the PA module.
- Connecting to a proper antenna through a 50  $\Omega$  transmission line or coaxial cable. Avoid using damaged cables or corroded connectors while attaching the unit to an antenna.
- Terminating the antenna terminal into a 50  $\Omega$  power attenuator with minimum 20 dB attenuation.
- Connecting to a load capable of dissipating the RF power from the PA module. Loads capable of handling 50 Watts (min) are recommended.

### 3.3 POWERING-UP THE NUPOWER 05E05A

---

The NuPower 05E05A must be terminated to a proper load before power is applied. Refer to Section 3.2 for the specifications of the proper load. After the PA is properly terminated, the interface cable can be connected to the unit and power can be applied. The PA is now ready for operation.

### 3.4 TRANSMIT TURN-ON TIME

---



Caution: Do not apply transmit data until the PA module is at full power. This will prevent loss of data at the beginning of a message.

The NuPower 05E05A is at full power approximately 1  $\mu$ S after the RF Enable line goes low (ground). Therefore, transmit data can be applied to the input after 1  $\mu$ S without loss of data.

### 3.5 RF OUTPUT POWER VS. SUPPLY VOLTAGE

---

The NuPower 05E05A was designed for +28 VDC operation.



## 4 HARDWARE INTERFACE

- The RF Input connector is SMA (female).
- The RF Output connector is SMA (female).
- The pin-out definitions for the 9 pin Micro-D socket connector are provided in Table 5. In a typical installation, the PA module is mated to a host controller board via a cable harness.




The RF Out SMA connector is the antenna connection. This connection should always be loaded into 50  $\Omega$ , otherwise the PA could be damaged.

### 4.1 INTERFACE CABLE HARNESS

The cable harness that connects the host controller to the 9 pin Micro-D connector of the NuPower 05E05A is made up of 9 wires.

**Table 5: NuPower 05E05A Interface Pin-Out Definitions**

Pin No.	Pin Name	I/O	Description
3, 4, 5	V Supply	I	Primary Power (+28 VDC)
1, 2, 6, 8	GND	I	Signal and Power Ground
7	Temp Flag	O	Over-temp Indicator (Low = temperature fault)
9	RF Enable	I	Transmit Control

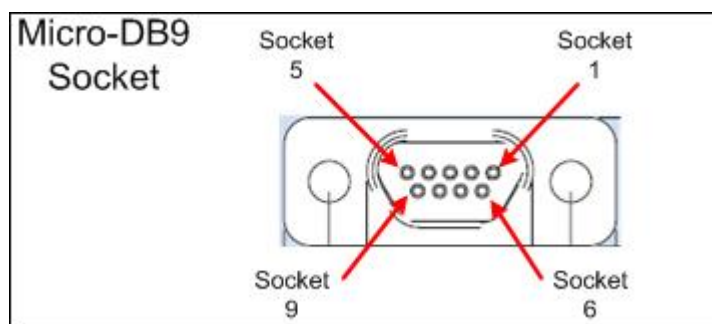

**Figure 4: Micro-D Socket Locations**

### 4.2 DC POWER

The nominal supply voltage for the NuPower 05E05A is +28 VDC; The acceptable supply voltage range is +27 to +30 VDC.

---

### 4.3 GROUND

---

The signal and power grounds are tied together in the PA module.

---

### 4.4 RF ENABLE

---

This signal is the logic control input that designates whether the unit is in transmit or standby mode. The RF Enable line is pulled high internally placing the PA module in *standby* mode. If the pin is left floating (i.e. not connected), the unit will default to *standby* mode.

Grounding the pin (i.e. a voltage below +0.2 VDC) places the unit in *transmit* mode. The user can either connect the RF Enable line to pins , 1, 2, 6 & 8 on the CTRL/PWR interface connector, or an open drain logic line capable of sinking 500  $\mu$ A to place the unit in *transmit* mode.

---

### 4.5 TEMP FLAG

---

This signal is an output to indicate an over-temperature condition in the NuPower 05E05A. A logic high (+5 VDC) indicates normal operation, while a logic low (0 VDC) indicates an over-temperature condition. The NuPower 05E05A incorporates internal logic circuitry that turns off the DC bias to the RF transistors.



Caution: The amplifier should be shut down and allowed to cool off when the over-temperature flag is set low to avoid damage to the module.

## 5 GETTING HELP - APPLICATIONS ENGINEERING

---

NuWaves Engineering offers technical support for basic configuration help and troubleshooting, Monday through Friday, 8 a.m. to 5 p.m. Eastern Time.

Technical Assistance, Application Engineering and Sales:

Phone: (513) 360-0800

Email: [support@nuwaves.com](mailto:support@nuwaves.com)

NuWaves Home Page: [www.nuwaves.com](http://www.nuwaves.com)

Product Warranty:

[http://nuwaves.com/wp-content/uploads/2011/04/NuWaves\\_Warranty\\_Repair.pdf](http://nuwaves.com/wp-content/uploads/2011/04/NuWaves_Warranty_Repair.pdf)

### 5.1 GENERAL INFORMATION

---

Copyright © 2006 - 2015 NuWaves Ltd. All rights reserved. The information contained in this user manual is copyright protected. NuWaves reserves the right to make periodic modifications and product improvements to the NuPower product line and the associated documentation.